

Instructions for Use

Buffet-heat-lamp

Art. No. B 0041, B 0042, B 0047, B 0048

Art. No. B 0043, B 0044

Art. No. B 0051, B 0052, B 0061, B 0062



Scholl Apparatebau GmbH & Co. KG

Zinhainer Weg 4
D-56470 Bad Marienberg / Germany

Phone	+0049 (0) 2661 – 9868-10
Fax	+0049 (0) 2661 – 9868-38 (Service)
Internet	www.scholl-gastro.de
E-mail	info@scholl-gastro.de



TABLE OF CONTENTS

Table of contents.....	2
Preface.....	4
Conventions.....	5
Pictograms – General safety notes.....	5
Pictograms – Warning notes	7
Pictograms – Important notes.....	8
Product information	10
Information regarding compliance with standards, laws and directives	10
Safety.....	10
Unpacking and start-up	11
Packing.....	11
Sensitivity	11
Intermediate storage.....	11
Scope of delivery	11
Start-up.....	11
Assembly instructions.....	12
Operation	13
Maintenance	14
Maintenance and repair	14
Cleaning and care	14
Troubleshooting	15
Technical data	16
Dimensioned Drawing	17
Circuit Diagram	19
Spare Parts List	20



GBA B 0041 1 E

Disposal and environment.....	25
Environmental notes	25
Disposal of packing material.....	25
Disposal of the appliance	25
Warranty and service	26
Warranty conditions.....	26
Service address.....	27



PREFACE

Congratulations!

In purchasing this new SCHOLL appliance you have chosen a product which meets highest technical standards while providing outstanding convenience in practical use.

This appliance has been designed with minimal energy consumption in mind. Used responsibly, it will serve you well in an ecologically sound manner.

Please read the information in this manual carefully before starting up this appliance. On the following pages you will find important notes regarding its operation, care and maintenance so that you will be able to enjoy its use for a long time.

If a malfunction should nevertheless occur, please consult the "Troubleshooting" section first. In many cases you should be able to remedy minor problems yourself, thus saving unnecessary service costs.

Please retain this manual carefully and pass it on to any subsequent user for his or her information and safety.

A quality product, properly treated, will give you many years of satisfactory service.

We trust you will enjoy using this product!

Yours sincerely

Gustav Scholl Apparatebau GmbH & Co. KG



CONVENTIONS

PICTOGRAMS – GENERAL SAFETY NOTES



Be sure to observe these Instructions for Use as well as the safety notes to prevent injuries or damage to health or property. Do not alter or modify this appliance.



Never use a defective appliance. If you suspect the unit of being faulty or discover an unusual noise or smell, turn off the power switch and pull the plug out of the socket-outlet, or otherwise disconnect the appliance from the mains and de-energize it (i.e., ensure that it no longer carries any voltage). Do not use this appliance when its power cord is damaged.

Failure to observe this warning may result in a fire hazard or electrical shock!

 


Maintenance and repair work must be carried out only by qualified professionals using original spare parts and accessories. Do not attempt to carry out repairs on this appliance yourself!



Connect this appliance to suitably earthed mains outlets only. Ensure that your mains power supply conforms to the data stated on the nameplate of the appliance.

Failure to observe this warning may result in a fire hazard or electrical shock!



Place this appliance on a sturdy, level and heat-resistant surface to prevent fire hazards and accidents.




This appliance is not intended to be used by persons (including children) of limited physical, sensory or intellectual abilities, or lacking in experience and/or knowledge, unless they are supervised by a person responsible for safety who instructs them in the use of the device. Children should be supervised to ensure they will not play with this appliance.



Do not run the power cord near heat sources, over sharp edges, etc. Always pull on the plug, not the cord, to remove it from a socket-outlet since the cord might be damaged as a result. Do not allow cords to hang unsupported. Route the cord so that it will not form a tripping hazard!



When using an extension cord, unwind the cord from the reel to prevent heat build-up or cord fires, respectively. The socket-and-plug connection must be splash-proof and be made of, or coated with, rubber. **Each wire must have a cross-section of at least 1.5 mm².**

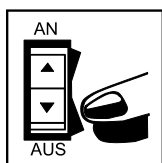

Do not allow this appliance to operate unattended. Ensure that its power switch is set to „0“ before inserting the plug into an electrical socket-outlet. Avoid starting the unit unintentionally. Connecting the unit to the mains with its power switch set to ON may cause accidents.



Protect this appliance from moisture (water spray, rain). Do not immerse the appliance in water or other fluids and do not place it in a dishwasher. Any penetration of water into the unit will increase the risk of an electrical shock.



Do not touch the surfaces of the appliance. The surfaces of this appliance may get hot. Please allow the unit to cool down fully before cleaning or stowing it. Never cover this appliance.

Burn injury or fire hazard!

PICTOGRAMS – WARNING NOTES



Cleaning must only be performed by qualified persons who have read and understood these Instructions for Use and are familiar with applicable hygiene rules. Ensure that care is exercised during cleaning of the unit.

For light cleaning, wipe down the surface with a cloth or soft brush/sponge soaked in warm water which contains a small amount of dishwashing detergent. Follow this up by wiping with clear water until no cleaning agent residue remains on the surface, as the latter might cause discoloration or stains. Finish by rubbing the surface dry.


To remove more stubborn or extensive residue, a stainless steel cleaning product may be used.

Never use any of the following for cleaning:

- aggressive or bleaching products, i.e., containing active oxygen, chlorine, or caustic/corrosive constituents.
- abrasive cleaning products such as scouring creams/pastes, steel wool, saponified steel wool, metal or plastic sponges, or sponges with a scratchy surface (scouring side).



Never use steam and/or pressure jet cleaning equipment to clean this appliance. This might damage the appliance to the point where it may pose a **hazard to your life!**

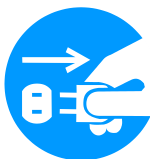

Before any cleaning, maintenance or repair work is carried out, the appliance must be disconnected from the mains and de-energized. To do so, it is not enough to set the power switch to OFF. Instead, the mains plug must be pulled or the electrical circuit must be de-energized, respectively. Check that no voltage is present before opening the appliance, and lock out the circuit to make it safe against re-energizing.



The total permitted regeneration and hot-holding time according to HACCP will be exceeded after 3 hours.



Risk of potential health impairment!



Allow the unit to cool down before starting any cleaning work.

Burn hazard

PICTOGRAMS – IMPORTANT NOTES



DANGER

indicates an immediately threatening hazard.

Failure to observe this warning notice will result in severe physical injury or death.



WARNING

indicates a potentially dangerous situation.

Failure to observe this warning notice may result in severe physical injury or death.



CAUTION

indicates a potentially harmful situation.

Failure to observe this notice may result in damage to property.



DANGER – electrical voltage

indicates an immediately threatening hazard.

Failure to observe this warning notice will result in severe physical injury or death.



ACHTUNG

IMPORTANT

Improper use may result in minor injuries or damage to property.



In addition to these Instructions for Use, a number of accident prevention and other regulations apply with regard to the operation of this appliance. As regards food handling, please observe HACCP rules concerning compliance with hygiene requirements.

If you have any questions, please contact your supervisor(s) or safety representative.



This product must not be disposed of in domestic waste.

Please arrange for proper recycling of this product via your local provider of waste disposal services.

PRODUCT INFORMATION

The buffet-heat-lamp may only be used to keep dishes short-term warm.

INFORMATION REGARDING COMPLIANCE WITH STANDARDS, LAWS AND DIRECTIVES

This appliance conforms to the following:

EC Directive:	2014/30/EG	EMC Directive
	2014/35/EG	Low Voltage Directive
Harmonized standards:	DIN EN 60335-1: 2012-10	Household and similar electrical appliances – Safety
	DIN EN 61000-6-1: 2007-10	Electromagnetic compatibility (EMC) – Generic standard – Immunity
	DIN EN 61000-6-3:2011-09	Electromagnetic compatibility (EMC) – Generic standard – Emission

SAFETY



This appliance conforms to accepted technical rules and relevant safety codes. However, proper use of the appliance is a prerequisite for effectively preventing damage or accidents. Please comply with the notes provided in these Instructions for Use.

Further safety notes, refer to section

- Pictograms – General safety notes
- Pictograms – Warning notes
- Pictograms – Important notes



UNPACKING AND START-UP

PACKING

The type of packing employed will depend, to a large extent, on the adopted shipping mode and route. Except where otherwise agreed by contract, packing will conform to the "HPE Packing Guideline" defined by the German Federal Association of the Wooden Materials, Pallets and Export Packing Industry and by the German Engineering Federation.

SENSITIVITY

Particular care must be exercised during shipping and handling of this appliance to prevent damage resulting from exposure to excessive force or careless loading/unloading.

Shocks during shipping and handling must be avoided.

The appliance itself must be handled with care.

INTERMEDIATE STORAGE

Appliances not to be installed immediately upon delivery must be carefully stored in a protected place. For the duration of such storage they must be properly covered to prevent any ingress of dust and moisture into the unit.

SCOPE OF DELIVERY

The content of the delivery is stated in the delivery note and must be checked for completeness upon receipt.

Any damage in transit and/or missing items must be reported in writing immediately.

START-UP

Before putting the appliance into service, observe the following:

- Inspect the unit for any defect or damage sustained in transit.
- Clean the unit using a moist cloth and a small quantity of dishwashing detergent, then wipe it down dry with a piece of lintless cloth.
- Check that the data appearing on the nameplate match those of your local mains supply.
- Electrical safety functions must be carried out and checked for operability.
- Check all screw connections for tightness.
- Familiarize yourself with the Instructions for Use and with the conditions for the safe operation of this appliance.

Faulty equipment must not be taken into operation!

ASSEMBLY INSTRUCTIONS

- *Legal requirements and the connection conditions of your local power supply company must be fully observed.*
- *Before connecting or repairing the appliance, see to it that it is fully de-energized. Pull the CEE 7/4 two-pole and earthing-pin plug from the mains socket-outlet or switch off the circuit breaker.*
- *Full protection against electric shock hazard must be ensured by the installation.*
- *The appliance is supplied ready for plug-in and must only be connected to a two-pole and earthing-pin type socket-outlet installed in compliance with applicable regulations. Any relocation of a socket outlet or replacement of the connecting cord must only be carried out by an electrical specialist taking into account the relevant codes.*
- *If the plug is no longer accessible once the appliance is installed, an all-pole disconnecting device having a contact spacing of at least 3 mm must be provided on the installation side to comply with applicable safety requirements.*

OPERATION

The buffet-heat-lamp has one main switch and the buffet-heat-lamp BiTherm has two main switches placed in the stand.

The buffet-heat-lamp must be switched on/off by the main switch.

Indications:

Do not touch the infrared radiator! Burn injury!

Never cover the appliance while operating. Fire hazard!

Please read chapter Conventions.



MAINTENANCE

MAINTENANCE AND REPAIR



Maintenance and repairs on the appliance must only be carried out by an authorized professional observing applicable safety regulations.

Improperly executed work will put your safety at risk.

CLEANING AND CARE



- Allow the unit to cool down before cleaning it. **Burn hazard!**
- Stainless steel is particularly susceptible to scratching!
- Remove lime, grease and starch residue immediately to avoid the formation of stains.
- When using a cleaning product, observe the instructions for use provided by its manufacturer.



For light cleaning, wipe down the surface with a cloth or soft brush/sponge soaked in warm water containing a small amount of dishwashing detergent. Follow this up by wiping with clear water until no cleaning agent residue remains on the surface, as the latter might cause discoloration or stains. Finish by rubbing the surface dry.

To remove more stubborn or extensive residue, a stainless steel cleaning product may be used.

Never use any of the following for cleaning:

- aggressive or bleaching products, i.e., containing active oxygen, chlorine, or caustic/corrosive constituents;
- abrasive cleaning products such as scouring creams/pastes, steel wool, saponified steel wool, metal or plastic sponges, or sponges with a scratchy surface (scouring side).

We recommend you to clean the stainless steel surface once per week using a standard commercial stainless steel care product. This will result in the formation of a protective layer which prevents discoloration of the stainless steel surface.



In any event, observe the product manufacturer's instructions and try each product in a small area first before applying it to a larger surface.

TROUBLESHOOTING



Repairs must be carried out by an authorized specialist in compliance with applicable safety codes and regulations.

Improperly executed work will put your safety at risk!

Note that some work must only be carried out by an electrical specialist. According to DIN EN 60204-1: 2011-01, specialists are „persons who by reason of their relevant training and experience are capable of recognizing risks and avoiding potential hazards.“

Some malfunctions you may be able to remedy yourself. Always check first if the problem is due to an operating error. Repairs are not free of charge, even within the warranty period, if the problem is caused by an operating error or if you have failed to observe any of the following instructions.



Before any cleaning, maintenance or repair work is carried out, the appliance must be disconnected from the mains and de-energized. To do so, it is not enough to set the power switch to OFF. Instead, the mains plug must be pulled or the electrical circuit must be de-energized, respectively. Check that no voltage is present before opening the appliance, and lock out the circuit to make it safe against re-energizing.



Problem	Cause	Remedy
Appliance not working	Defective plug/electrical cord	DANGER! Hazardous electrical voltage. Pull out the mains plug and bar product from further use. To be remedied by an electrical specialist.
Appliance not working	Infrared radiator faulty	Exchange infrared radiator
Appliance not working	Main switch faulty	To be remedied by an electrical specialist.

TECHNICAL DATA




Colour	Chromium-plated	Art. No. B 0041, B 0043, B 0051, B 0061
	Chromium-plated, white	Art. No. B 0047
	Chromium-plated, black	Art. No. B 0048
	Gold	Art. No. B 0042, B 0044, B 0052, B 0062
Voltage	230V~	
Electrical power	250W	Art. No. B 0041, B 0042, B 0047, B 0048, Art. No. B 0051, B 0052, B 0061, B 0062
	500W	Art. No. B 0043, B 0044
Equipment	Art. No. B 0041, B 0042, B 0043, B 0044, B 0047, B 0048:	
	Heat-lamp with lamp shade, flexible arm, stand, main switch, connection line ca. 2,0m with two-pin earthed plug, incl. 250W infrared radiator white light	
	Art. No. B 0051, B 0052:	
	Heat-lamp with lamp shade, flexible arm, connection line ca. 2,0m, with screw fitting for built-in, incl. 250W infrared radiator white light	
	Art. No. B 0061, B 0062:	
	Heat-lamp with lamp shade, flexible arm, connection line ca. 2,0m, table board fixing mobile, incl. 250W infrared radiator white light	

GBA B 0041 1 E

DIMENSIONED DRAWING

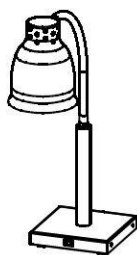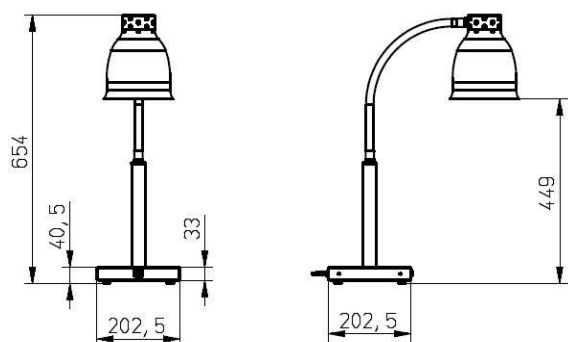


Dimensioned drawing Art. No. B 0041, B 0042, B 0047, B 0048

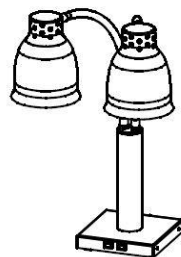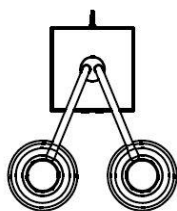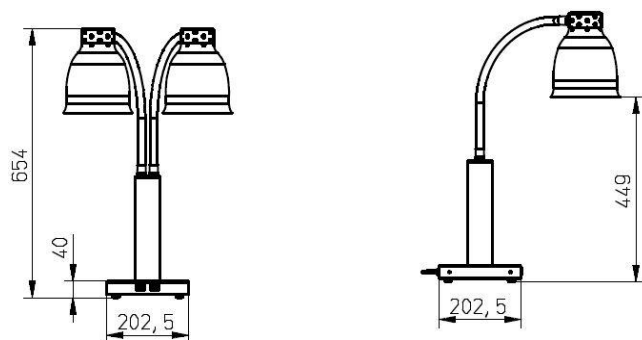


Dimensioned drawing Art. No. B 0043, B 0044

GBA B 0041 1 E

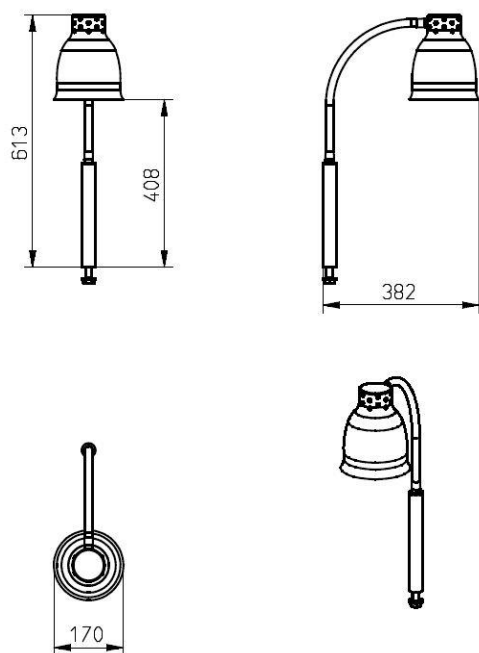


Dimensioned drawing Art. No. B 0051, B 0052

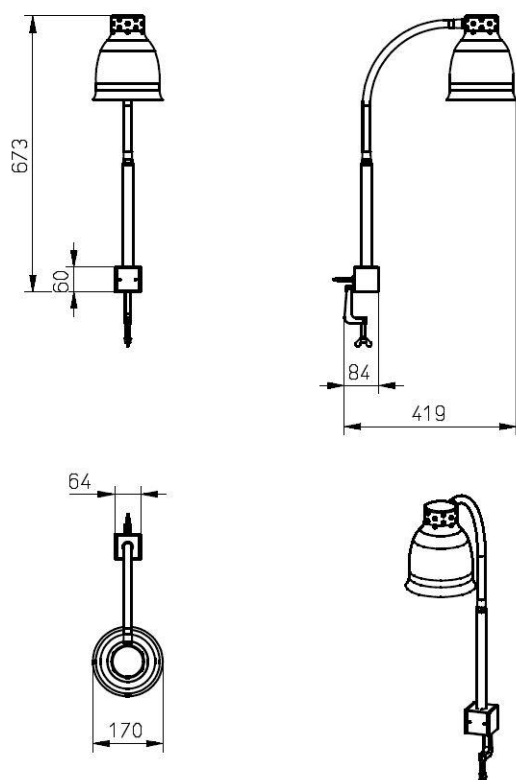

Dimensioned drawing Art. No. B 0061, B 0062


CIRCUIT DIAGRAM

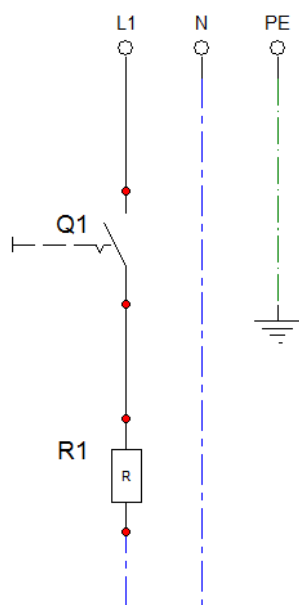

Q1 – Switch

R1 – infrared radiator white light


Circuit diagram Art. No. B 0041, B 0042, B 0047, B 0048

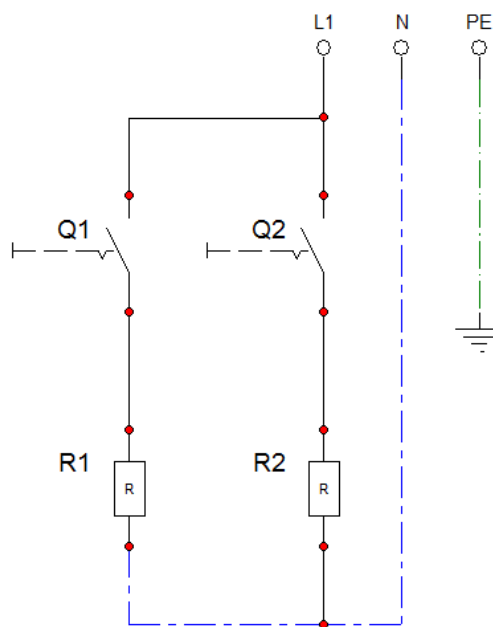

Q1, Q2 - Switch

R1, R2 - infrared radiator white light

Circuit diagram Art. No. B 0043, B 0044

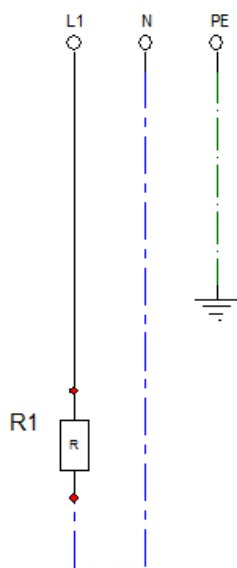

R1 – infrared radiator white light

Circuit diagram Art. No. B 0051, B 0052, B 0061, B 0062

SPARE PARTS LIST



Maintenance and repairs on the appliance must only be carried out by an authorized professional observing applicable safety regulations.

Improperly executed work will put your safety at risk.

Spare parts list Art. No. B 0041

component	label
TB-013106	tube for 24000/B/C
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light

Spare parts list Art. No. B 0042

component	label
TB-013143	tube for 24000/B/G
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,53	flexible lamp arm polished M12
82,20,28	lamp shade brass 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light



GBA B 0041 1 E

Spare parts list Art. No. B 0047

component	label
TB-018876	tube for 24000/B/W
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light

Spare parts list Art. No. B 0048

component	label
TB-014602	tube for 24000/B special
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light

GBA B 0041 1 E

Spare parts list Art. No. B 0043

component	label
TB-013294	tube for 24002/B/C
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light

Spare parts list Art. No. B 0044

component	label
TB-013328	tube for 24002/B/G
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,53	flexible lamp arm polished M12
82,20,28	lamp shade brass 1-part
74,70,52	unit base 20x20 mm
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
73,15,03	switch 1801.1102/27001
71,40,06	infrared lamp 250W, 230V white light

GBA B 0041 1 E

Spare parts list Art. No. B 0051

component	label
TB-013106	tube for 24000/B/C
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
73,80,65	fiberglass insulating tubing 6mm 400°C
73,80,02	silicone cable 3x0,75
73,42,02	threaded tube M10x1x15/ 24000
73,20,05	E27 porcelain socket 3-part SHT
71,40,06	infrared lamp 250W, 230V white light

Spare parts list Art. No. B 0052

component	label
TB-013143	tube for 24000/B/G
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,53	flexible lamp arm polished M12
82,20,28	lamp shade brass 1-part
73,80,65	fiberglass insulating tubing 6mm 400°C
73,80,02	silicone cable 3x0,75
73,42,02	threaded tube M10x1x15/ 24000
73,20,05	E27 porcelain socket 3-part SHT
71,40,06	infrared lamp 250W, 230V white light



GBA B 0041 1 E

Spare parts list Art. No. B 0061

component	label
TB-013258	tube for 24000/TS/C
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,52	flexible lamp arm chromium-plated M12
82,20,27	lamp shade copper chromium-plated 1-part
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
74,70,27	cap 60x60 black
74,40,45	screw clamp for radiator
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
71,40,06	infrared lamp 250W, 230V white light

Spare parts list Art. No. B 0062

component	label
TB-013283	tube for 24000/TS/G
TB-012433	lamp holder
85,09,20	serrated locknut DIN 6923 M10x1
82,20,53	flexible lamp arm polished M12
82,20,28	lamp shade brass 1-part
73,90,22	wiring harness 24000 B
73,80,65	fiberglass insulating tubing 6mm 400°C
73,70,30	connection cable 3x1,0 H05RN-F
73,42,02	threaded tube M10x1x15/ 24000
74,70,27	cap 60x60 black
74,40,45	screw clamp for radiator
73,40,19	cable relief plastic
73,20,05	E27 porcelain socket 3-part SHT
71,40,06	infrared lamp 250W, 230V white light



DISPOSAL AND ENVIRONMENT



The appliance has been packed before shipping to protect it against damage in transit. After unpacking, please dispose of packing materials in an environmentally sound manner.

All packing materials are eco-compatible, 100% recyclable and marked with a symbol to that effect.



While unpacking, keep packing materials (polyethylene bags, pieces of polystyrene, etc.) out of the reach of children.

ENVIRONMENTAL NOTES

DISPOSAL OF PACKING MATERIAL

Recyclable packing materials should be disposed of in sorted fractions for recycling via approved local disposal facilities.

For approved disposal facilities in your area, please contact your local government or community administration.

DISPOSAL OF THE APPLIANCE

Render the appliance inoperable before disposal.

Pull the plug out of the socket-outlet or arrange for disconnection by an electrician, then cut the mains cord off the appliance.

This product must not be disposed of in normal household waste at the end of its service life, but must be turned in for recycling at an approved collecting facility. This requirement is identified by a symbol on the product, in the Instructions for Use, or on the packing material.

Materials are recyclable as marked. By arranging for the recycling, recovery, or other form of re-use of end-of-life appliances you will make an important contribution to the protection of our environment.

Your local government or community administration will advise you as to which disposal facilities in your area accept discarded appliances for recycling.



WARRANTY AND SERVICE

WARRANTY CONDITIONS

The manufacturer accepts no liability or warranty in the following cases:

- failure to observe notes and instructions given in the Instructions for Use;
- use of the product in a manner not conforming to its intended use;
 - refer to „Intended Use“, in chapters Product information and Operation
- alteration or modification of the appliance or its functionalities;
- use of non-original spare parts.
- *The following wearing parts are not covered by the warranty: infrared radiator*

Except as otherwise stipulated by special warranty conditions, a 12-month warranty is granted on all product vis-a-vis merchants (details are covered by para. 11 of our General Terms and Conditions of Sale).

The warranty granted on appliances is a material warranty valid for a 1-year period, i.e., if a defect should occur we will send you the relevant part. The defective part must be returned to our address within two weeks. No claim based on alleged unsoundness of goods or for consequential loss or damage involving factors unrelated to the appliance will be accepted. Further warranty information is contained in our General Terms and Conditions of Sale or can be made available upon request.

Appliances not produced by ourselves are subject to the warranty terms and conditions or the relevant manufacturer. These, too, will normally be limited to a material warranty. We do not grant any direct warranty on such items.

**IMPORTANT**

To enable our customer service to prepare repairs carefully and to provide the appropriate spare parts, please provide the following information when reporting a customer service requirement:

1. Your precise address (where applicable, final customer's address, person to contact)
2. Your contact details such as phone, fax and e-mail (including, where applicable, those of the final customer)
3. Times when a customer service visit will be convenient
4. Exact appliance specifications (consult the nameplate and/or purchase receipt)
5. Purchase date
6. Accurate description of the problem or of your service request (including, where applicable, a photo of the defect or installation situation)

Please also keep the purchase receipt on hand. This will help us avoid unnecessary time and costs while enabling us to work more efficiently for you.

SERVICE ADDRESS

You can reach us at the following times:

Monday - Thursday from 7:00 a.m. till 4:00 p.m.

Fridays from 7:00 a.m. till 12:15 p.m.

Outside these office hours please communicate your requests per e-mail or telefax.

Scholl Apparatebau GmbH & Co. KG

Zinhainer Weg 4

D-56470 Bad Marienberg / Germany

Phone 0049 (0)2661/9868-10

Telefax 0049 (0)2661/9868-38

E-mail service@scholl-gastro.de