



Parameter Level 1

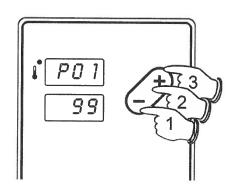

For service menu access by users

- 1. Hold the +/- buttons, for the temperature, pressed in for 4 seconds, the parameter number is displayed in the top display and the value in the one below.
- 2. Change the parameter with +/-.
- 3. Set the value, by holding the front heat button pressed and change with +/-.

If a button is not pressed for 10 seconds, the panel returns to the previous display.

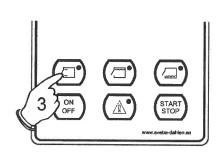

Parameter list	Area	Default	Default Pizza
P01: Max. Allowed Current. Set to the same value (amps) as the fuse feeding the bakery's oven. If the oven's consumption of current exceeds this value a deck is automatically deactivated. Order of priority when disconnecting a deck. 1. Disconnects the deck whose temperature is closest to the reference value of the deck where no baking program has been started. 2. If a baking program has been started in all decks, the deck whose temperature is closest to the reference value will be disconnected. When a deck is disconnected from the load relay, its temperature symbol will flash. P28 must be activated.		0	0
P02: Weekly Timer Activation of the panel's weekly timer. The panel shows <i>Stb</i> (stand by) instead of <i>Off</i>	0: deactivated 1: activated	0	0
P03: Energy-saving timer. The energy-saving mode is activated by setting a value greater than zero in P03. If a baking program is not being run and a button is not used within the time set in P03, the panel automatically changes over to the temperature set in P04. If a button is pressed thereafter, the panel changes back to the previously set baking temperature.	0-999min	0	0
P04 Energy-saving temperature. See P03.	0-250C	100	100