
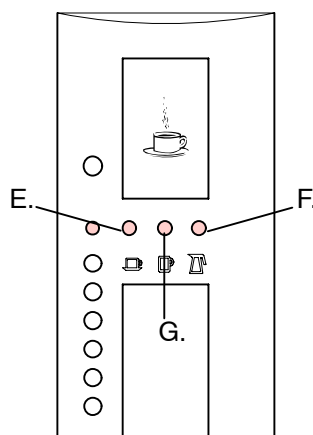


FRESHMORE

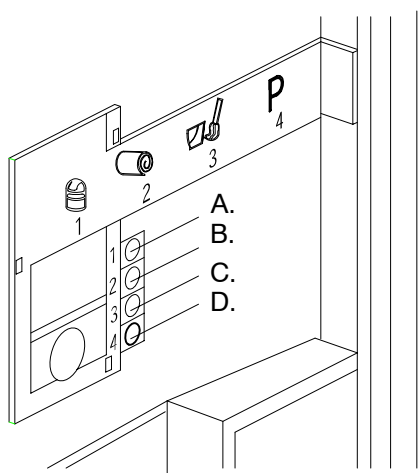

Resetting the daycounters to zero

- Press the programming button (D.) to start the programming.
- Select any drink with one of the selection buttons.
- Keep the button pressed down during 5 seconds.

The daycounter for *all* drinks is reset to zero for cups, mugs, half jugs and whole jugs.

Resetting the total counters to zero

- Press the programming button (D.) to start the programming.
- Press key (C.) at the inside of the door (min. 5 sec.).

The total counter for *all* drinks is reset to zero for cups, mugs, half jugs and whole jugs.

Interrupt the descaling program

- If the descaling has started in the meantime, then push **longer than 10 seconds** on the cancel key (E.) to stop the descaling programme.



WARNING

- △ Stop the descaling programme **never** when you have already poured descaler into the machine!

Switching on or off the program safety

- Press the programming button (D.) to start the programming.
- At the same time push the following keys E. and F. (min. 5 sec.).

Please note:

- The counter menu remains accessible.
- Descaling the machine remains possible.

Starting the boiling program

- Press the programming key (D.) to start the programming.
- Press three times the [Enter] key (G.).
- Set with the setting key (F.) the temperature at 0°C.
- Press the setting key (E.). Now, this key has the function of starting key.

Interrupt the boiling program

- Switch the machine off and on by turning the ON/OFF switch.
- At the same time push the following keys E. and F., until the stand-by display appears.

Please note:

- The next time the machine will be turned off and on again the boiling programme will be started.

Starting the calibration program

- Press the programming button (D.) to start the programming.
- Keep button (C.) pressed down and press button (G.).