


## START UP

- First of all, remove the package.
- Remove the security fixing seal inside from the inner parts of the machine. You must remove the filter to be able to open the front cover, and have access to the squeezing system.

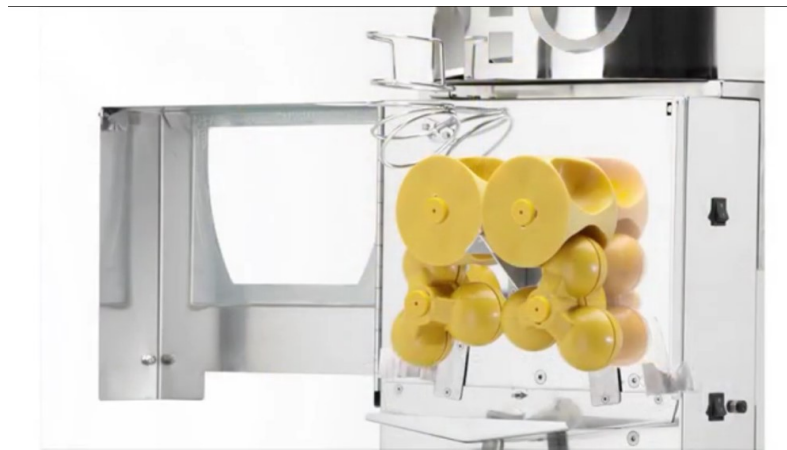

- Open the door of the cabinet:
  - Take the 3 shelves to install it on the right side structure.
  - Take the bottles support tray and attach it to the door at the height wishing..



- Plug the machine and press the two buttons (position I) in the right side of the machine; the machine will only start to work if you press the faucet back (if you press it forward, it won't work).



#### TIPS ON USE

- Check the filter is not full of pulp to avoid the juice can be blocked; then, empty the filter **every time you load the feeder system** more or less.
- **Empty the rubbish bucket** every two times you load the feeder system.
- **Check the peel extractors are installed in the machine.**

## CLEANING OF THE SQUEEZER SYSTEM

### *(Recommendation: daily)*

- Switch the Main and automatic feeder buttons off and unplug the machine.
- Remove the stainless steel buckets from both sides, and press the faucet in a way it remains in a position that allow us opening the front cover, removing the filter first.
- Remove the following parts in this order: peel removers (right and left), yellow screws, hollow items and squeezer balls. You don't need to remove the cutting blade every day. When you want to clean it, just press it up to get it.
- All the removed parts can be washed by hand or in the dishwasher. For the rest of the body, cover and glass you can use a humid piece of cloth, water and some neutral soap. The same can be used for the rest of the machine, buckets...
- In order to clean the faucet, we will use one jar or bottle with water and pour it over the filter funnel, pressing the faucet in order to take out the water and clean the pipe. If necessary, unscrew the faucet and clean the duct with a stick or brush.

## CLEANING OF THE AUTOMATIC FEEDER


*(Recommendation: weekly)*

- When the automatic feeder is empty, clean it with a wet piece of cloth.

*(Recommendation: monthly)*

- Finally, in order to clean the automatic feeder, we will unscrew the central black screw and take out the spinning plate. Once we have cleaned it with a wet piece of cloth, we will install it back in the same position.
- **You mustn't take out the gears from the spinning plate under no circumstances.** If you extract it by mistake, install it back in the next way (looking at from the top, the left one is the right side):

Right position looking at from the top; the right side is wrong. The convex side of the gear must be on the top position.

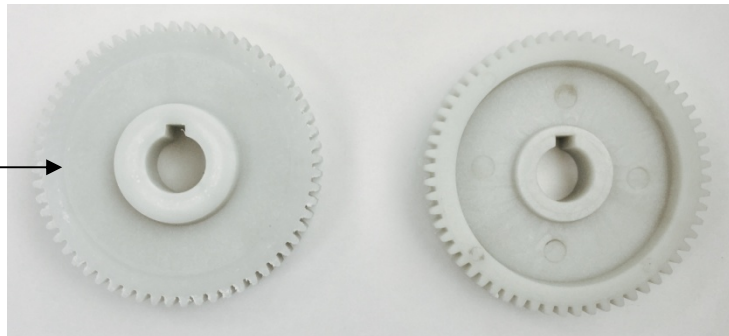

- Once we have done these steps, we will mount back all the parts in the contrary way we have removed it, being completely sure to install it properly.

